

# SANPLAST.



**WP/PR 75x170**



**WP/PR 80x180**




**WS/PR**



**WSzs/PR**




**WOW/PR**

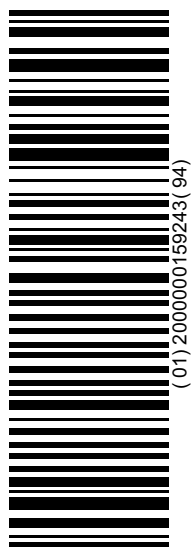


## PRESTIGE

- PL** Instrukcja montażu wanny
- DE** Montageanweisung - Badewanne
- GB** Bathtub installation instruction
- FR** Notice de montage de la baignoire
- RU** Инструкция монтажа ванны
- CZ** Návod k montáži vany
- RO** Instrucțiuni de montaj cadă
- HU** Kádszerelési útmutató
- SK** Návod na montáž vane

# WP/PR, WS/PR, WSzs/PR, WOW/PR

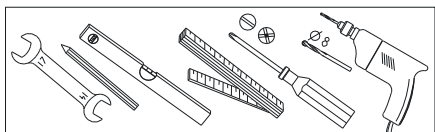

**A**

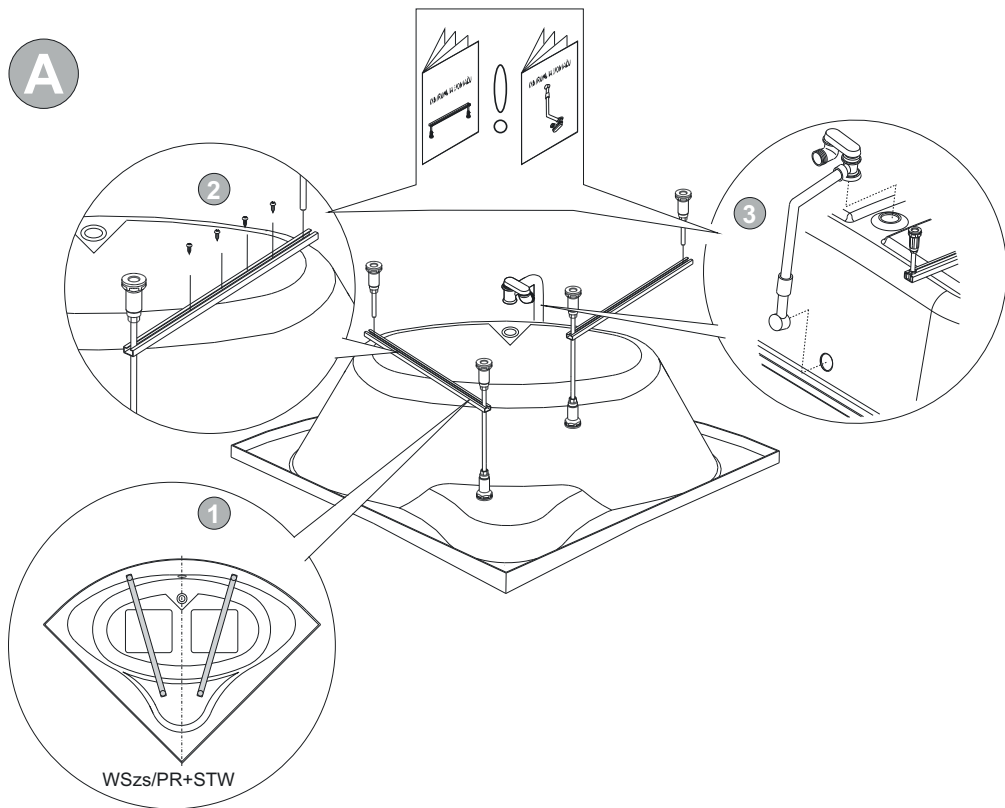





WSzs/PR+STW






WP/PR 75x170  
+STW

WP/PR 80x180  
+STW

WS/PR  
+STW

WOW/PR  
+STW

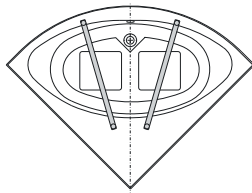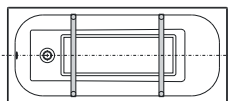

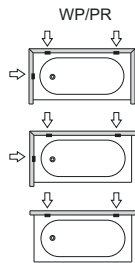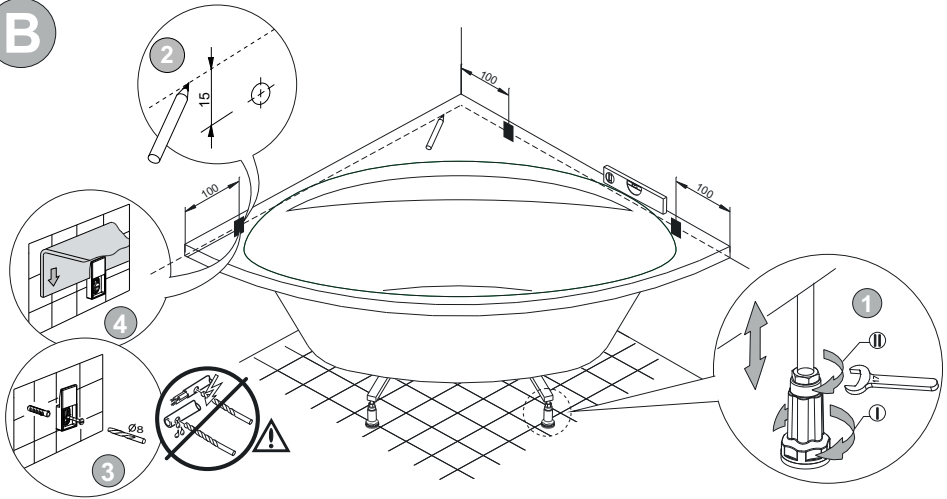**B****C**